 


*EVO*Corse

JACK HOLDER INSTALLATION GUIDE

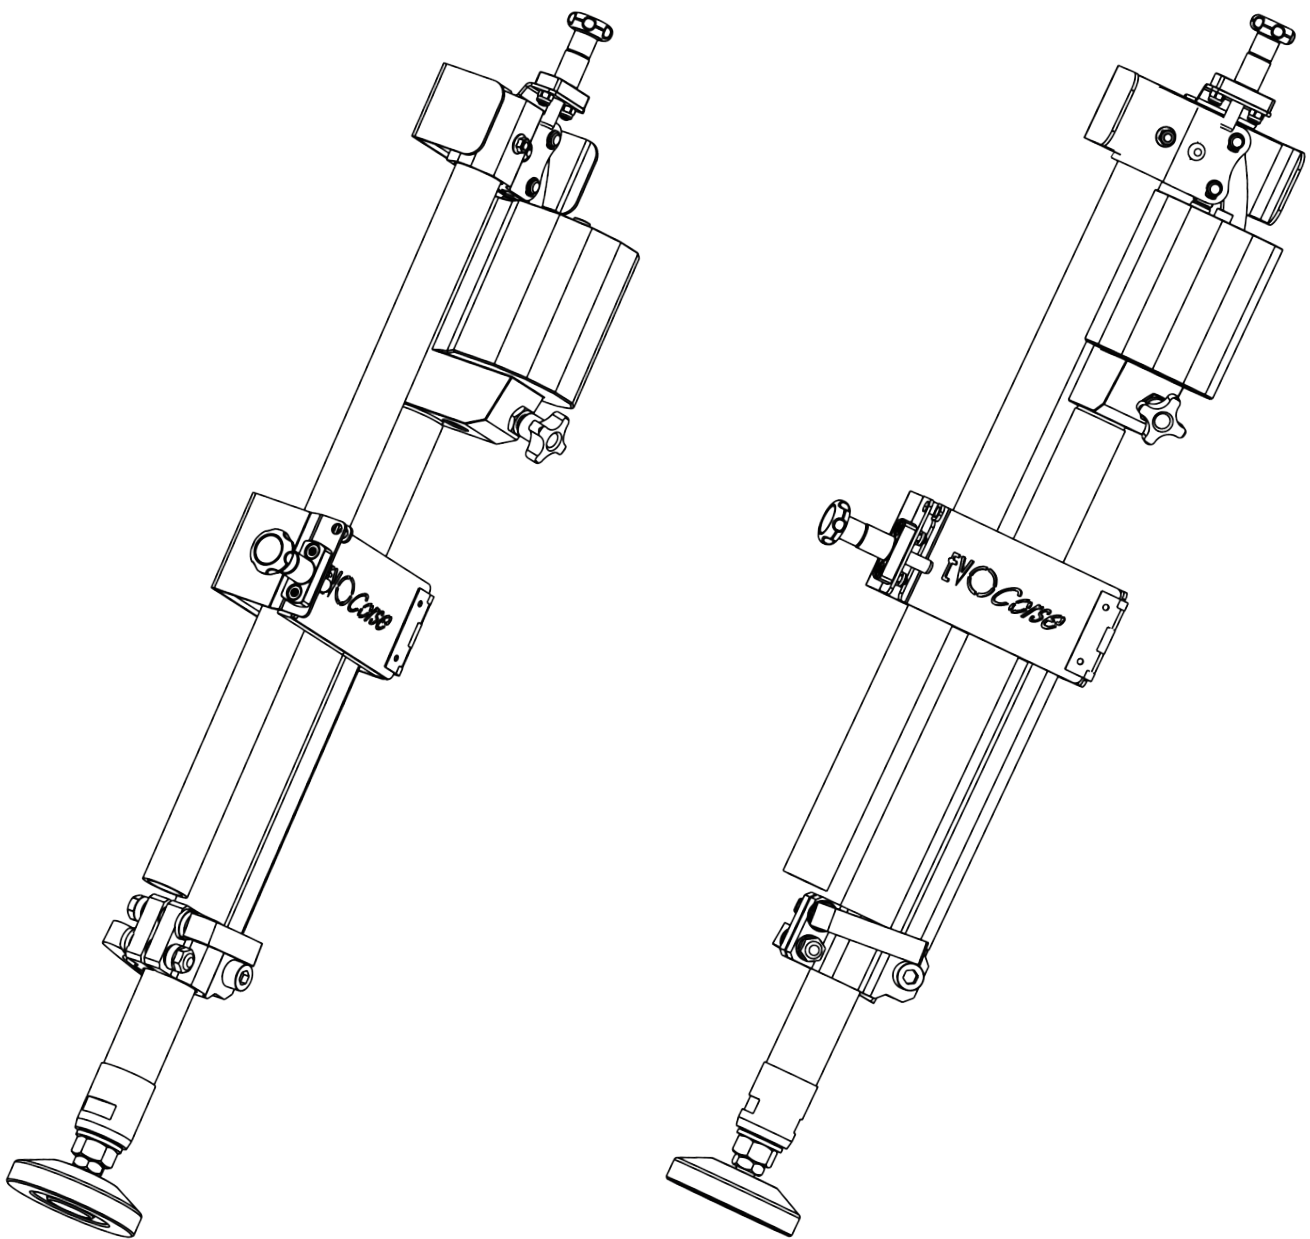

5. MAINTENANCE

To ensure maximum durability and proper functioning of the Jack Holder, regular checks should be performed on wear-prone parts such as the hardware and protective pads. Replace any damaged components with original spare parts.

Clean the holder with a soft, non-abrasive cloth, avoiding the use of aggressive solvents that could damage the materials.

6. WARNINGS

Use the Jack Holder exclusively for fixing the jack during competitions.

Do not subject the holder to excessive loads beyond those specified in the jack's instructions.

Periodically check the stability and integrity of the holder.

7. FINAL NOTES

Locking the Jack Holder

To secure the Jack Holder and prevent theft, a safety lock can be used. This lock can be applied to the door of the lower Jack Holder to ensure the unit remains safely closed.

EVO Corse does not assume any responsibility for damages caused by improper use or non-compliance with the provided instructions.

The holder is designed for professional use and should only be used on competition vehicles.

For any doubts or assistance requests, contact our customer service through the official website or support channels.

The warranty on the Jack Holder is valid only if the product is used correctly and in accordance with the assembly and maintenance instructions.

3. REQUIRED TOOLS


1x 4 mm Allen wrench

1x 8 mm wrench

4.1 POSITIONING

Choose a stable point on the vehicle where the Jack Holder will be fixed, preferably on a rigid and easily accessible surface. Ensure that the jack can be easily attached and removed.


4.2 JACK HOLDER INSTALLATION

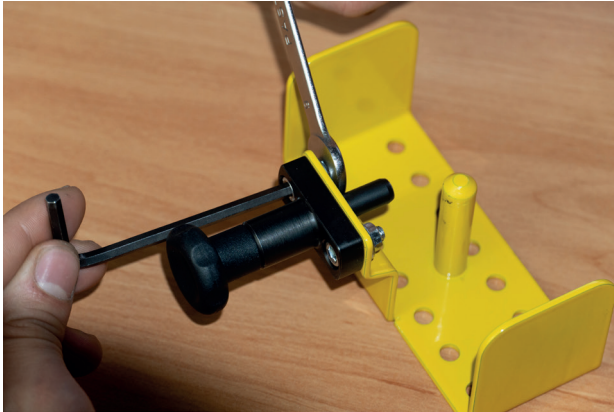

Attach the push knobs using the provided hardware, ensuring they are securely tightened.

Place the Upper and Lower Jack Holders on the selected surface and anchor the two supports using the appropriate method for the mounting area (screws, rivets, welding), after checking the applicable technical regulations.

Apply the protective pads provided in the kit inside the supports, following the order listed in the article list, without reversing the positions.

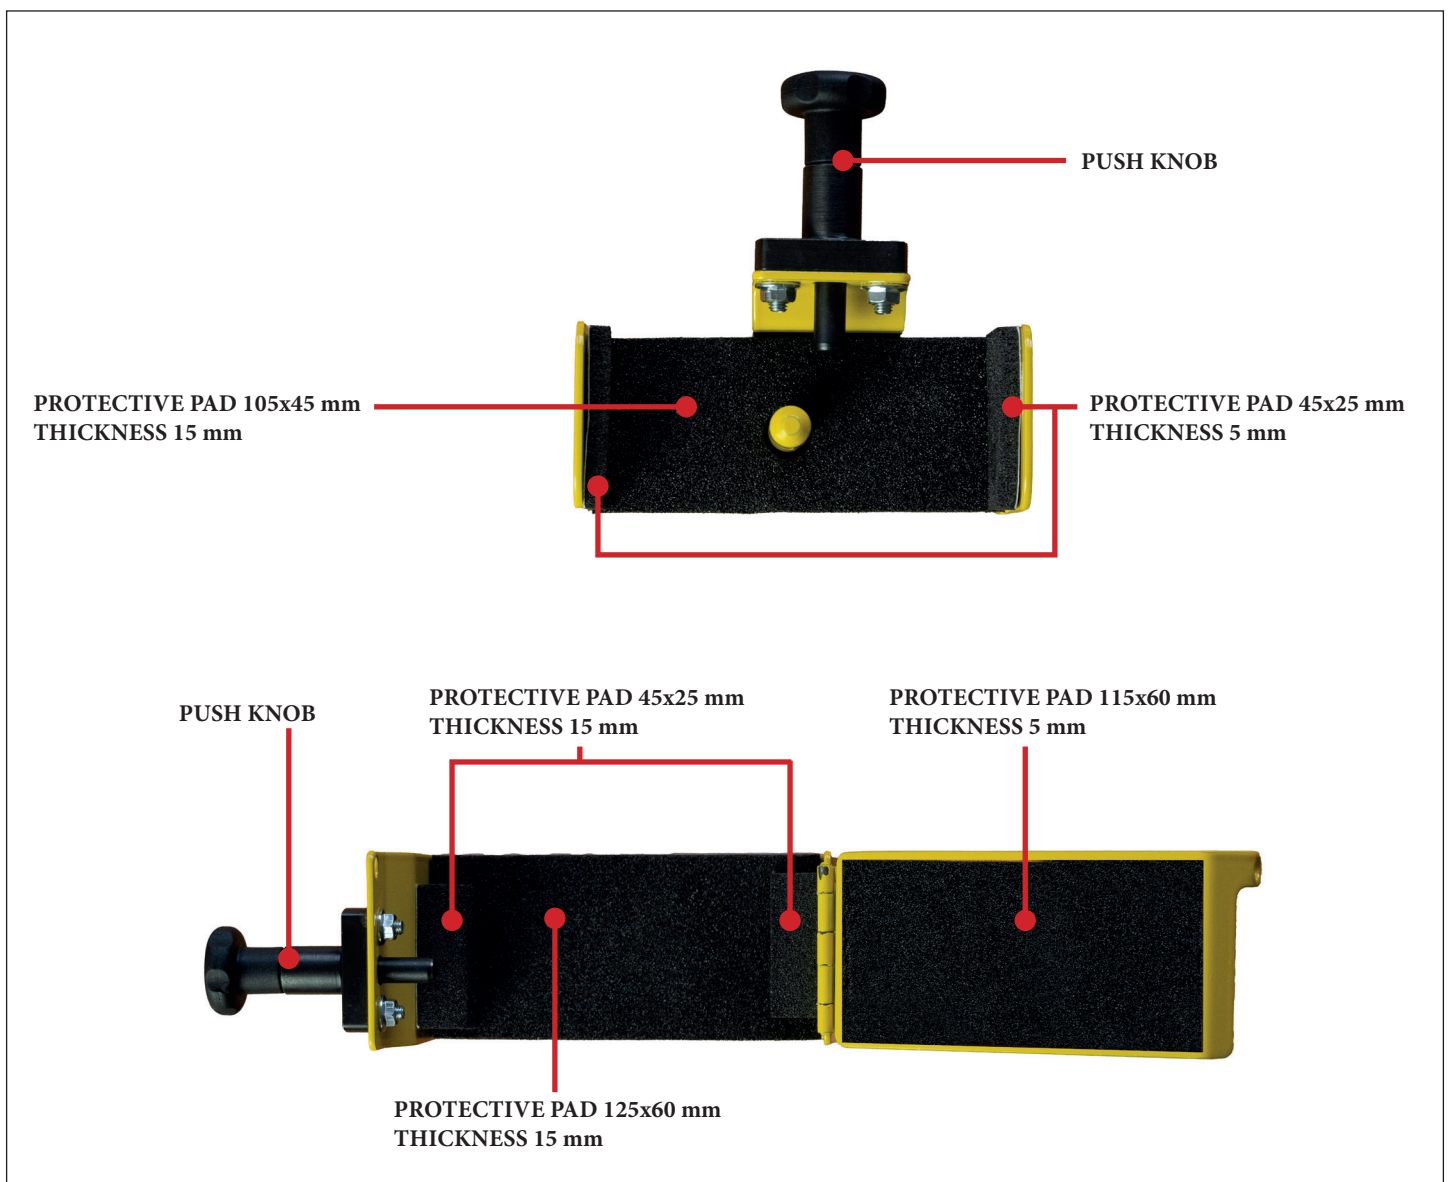

JACK HOLDER

INSTALLATION GUIDE

 
1. INTRODUCTION

The Jack Holder is a support designed for the secure and quick attachment of the jack to the vehicle. Its two-part structure ensures stability and ease of access, optimizing intervention times during competitions.


2. PACKAGE CONTENTS

- 1x - Upper Jack Holder
- 1x - Lower Jack Holder with door
- 2x - Push knob (with mounting hardware)
- 1x - Protective pad 125x60 mm - thickness 15 mm [for the base of the lower jack holder]
- 4x - Protective pad 45x25 mm - thickness 15 mm [for the sides of the lower jack holder]
- 2x - Protective pad 115x60 mm - thickness 5 mm [for the door of the lower jack holder]
- 1x - Protective pad with hole 105x45 mm - thickness 15 mm [for the base of the upper jack holder]
- 4x - Protective pad 45x25 mm - thickness 5 mm [for the sides of the upper jack holder]

UPPER JACK HOLDER

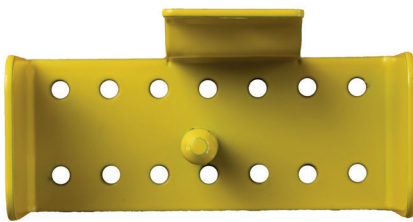

PROTECTIVE PAD 45x25 mm
THICKNESS 5 mm

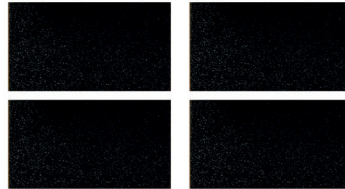


PROTECTIVE PAD 105x45 mm
THICKNESS 15 mm



LOWER JACK HOLDER




PROTECTIVE PAD 45x25 mm
THICKNESS 15 mm

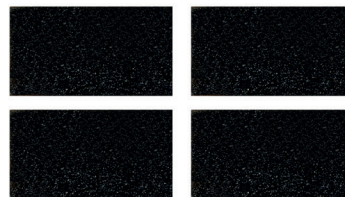

PROTECTIVE PAD 125x60 mm
THICKNESS 15 mm



PUSH KNOB & MOUNTING HARDWARE

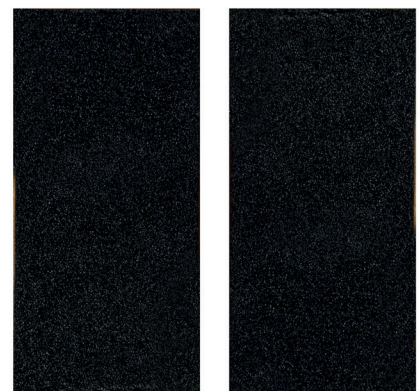

PROTECTIVE PAD 115x60 mm
THICKNESS 5 mm